

Axafe

Digital Lock

Back



• EDL21



• REDL

Keyless Push Button Electronic Digital Lock(EDL) offers you comfort, convenience and reliability. Your Memory is just a Key. For dual guard, EDL with keylock is optional.

How to open?

Please check first if batteries are loading in battery housing.

The initial code from the factory is ①②③④

- ① **Push Start Button** LED flickers with Bi sound
- ② **Push Initial Code ①②③④ in sequence.**
- ③ **Push Finish Button** (Melody rings)
- ④ **Turn Knob(or Key) clockwise and open door while melody rings.**

- ※ In case that wrong personal code pushed, it sounds Bi Bi Bi Bi.
- ※ If wrong code tried over 5 times, lock gets paralysed and doesn't work.
- ※ How to release lock from paralysis?
- ※ Push original personal code twice consecutively in opening procedure (No sound but LED flickers when button pushed).
- ※ If procedures are followed exactly, melody rings.

ex) C①②③④# C①②③④#

How to enter your personal code? (Two different codes are available)

① 1st Code

- ① Push Memory Button **M** (LED flickers and it sounds Bi)
 - ② Push Button **C** (LED flickers and it sounds Bi)
 - ①.
 - ③ Push Finish Button **#** (LED goes on and it sounds Bi...)
 - ④ Enter 1st Personal Code. (over 4 digits at least, 16 digits in max)
 - ⑤ Push Finish Button **#** (Melody rings)
- ex) In case of Personal Code 2002, push buttons **M①# ②C②②#**

② 2nd Code

- ① (LED flickers and it sounds Bi)

Push Memory Button

- ② Push Button **M** (LED flickers and it sounds Bi)
- ③ Push Finish Button **#** (LED goes on and it sounds Bi...)
- ④ Enter 2nd Personal Code (over 4 digits at least, 16 digits in max)
Code
- ⑤ Push Finish Button **#** (Melody rings)
ex) In case of Personal Code 8001, push buttons **M** **2** **#** **8** **0** **0** **1** **#**

How to change your personal code without opening door?

- ① Push Finish Button **#** (LED flickers and it sounds Bi)
- ② Push your present personal code (LED flickers and it sounds Bi)
code
- ③ Push Finish Button **#** (LED flickers and it sounds Bi)
- ④ Push New Personal Code (over 4 digits at least, 16 digits in max)
- ⑤ Push Finish Button **#** (Melody rings)
ex) If you want to change present personal code 1999 into new personal code 2000,
push buttons **#** **1** **9** **9** **9** **#** **2** **0** **0** **0** **#**

※ **Caution:** to confirm if the personal code is entered exactly, push buttons in opening procedures prior to closing door. For example, in case of your personal code 2000, push buttons C 2000 #.

if procedures are properly done, melody rings four seconds.

When to replace batteries?

If door is not opened in spite of LED flicker and melody, it indicates that battery is not strong enough to actuate solenoid. Then, batteries should be replaced with new ones (1.5V Alkaline AA 4 PCs)

※ The personal code is not erased even if battery is completely exhausted.

※ Battery life span: 3years (In case of door openings 3 times a day)

Back

Copyright © 1986-2006 Chief Applications Israel Ltd.